 


If you are a Windows user, please find the appropriate keycaps in the box, then follow the instructions below to find and replace the following keycaps.

 
Keychron K4

96% Wireless Mechanical Keyboard

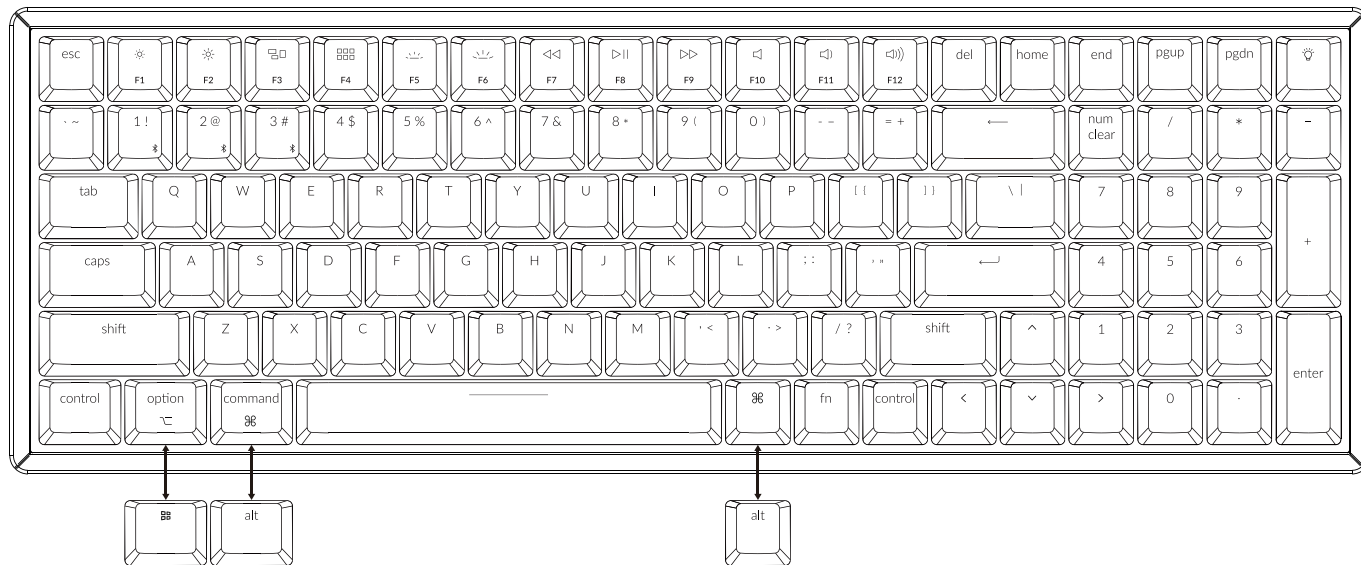

A tactile mechanical keyboard for peak productivity

1 Connect Bluetooth

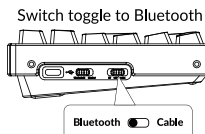


Press fn + 1 (for 4 seconds) and pair with device named Keychron K4




3 Change Light Effect

 Press light effect key

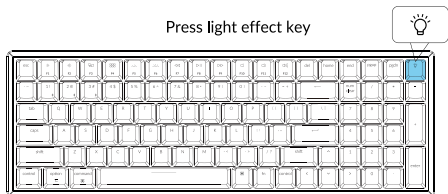

 For RGB version - Press fn + right arrow / left arrow to change color

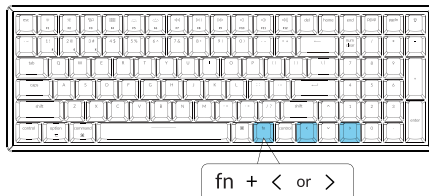


5 Disable Auto Sleep Mode

The keyboard goes to Auto Sleep Mode in 10 minutes of sitting idle to save battery




 Press fn + S + O (for 4 seconds) to disable the Auto Sleep Mode.

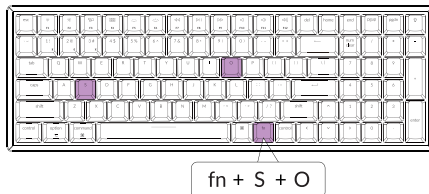


7 Turn Off the Backlight



 
If you are on the Mac, the default is to press F5 key.
If you are on the Windows, the default is to press fn + F5 key.

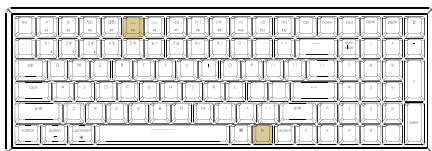

Or press the fn + light effect key.

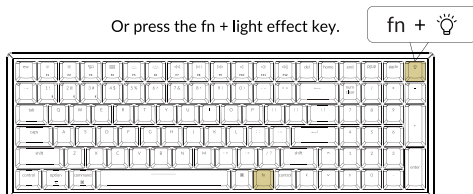 


2 Connect Cable

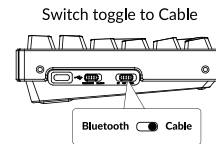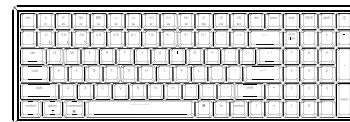   

4 Switch Between Function and Multimedia Keys (F1- F12)

 
For Windows: Press fn + X + L (for 4 seconds) to switch

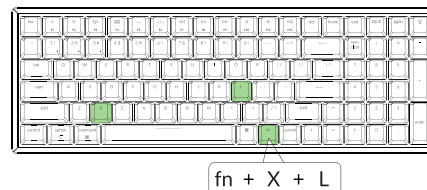

For Mac: Go to system settings > Keyboard > and enable the function keys.
*For F5 & F6 as function keys press fn + K + C (for 4 seconds) and use same shortcut to switch.



 Settings



Keyboard

Use F1-F12 etc keys as standard function keys
When this option is unchecked, press the Fn key to use the special features printed on each key.
Enable the function keys

6 Remap keys

We don't have an official software to remap the keys yet.
But you can use these two software to get the job done.
(Except the light effect key)

For Mac - Karabiner

Karabiner

For Windows - SharpKeys

SharpKeys

 
6.5 Linux's Setting

We have a Linux user group on facebook. Please search "Keychron Linux Group" on facebook. So you can have better experience with our keyboard.



8 Factory Reset

Trouble shooting? Don't know what's going on with the keyboard?
Try factory reset by pressing fn + J + Z (for 4 seconds)

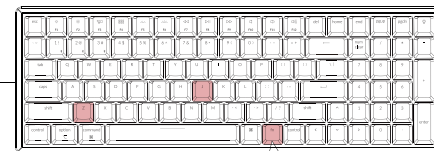

Not Happy

support@keychron.com