


US UK

Dear user

Thank you for choosing REDRAGON product. To protect your rights and for better customer service, please read the following warranty rules carefully.

1. Within 18 months of purchase date, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot pads) and spare parts replacement are not included in our warranty.

1

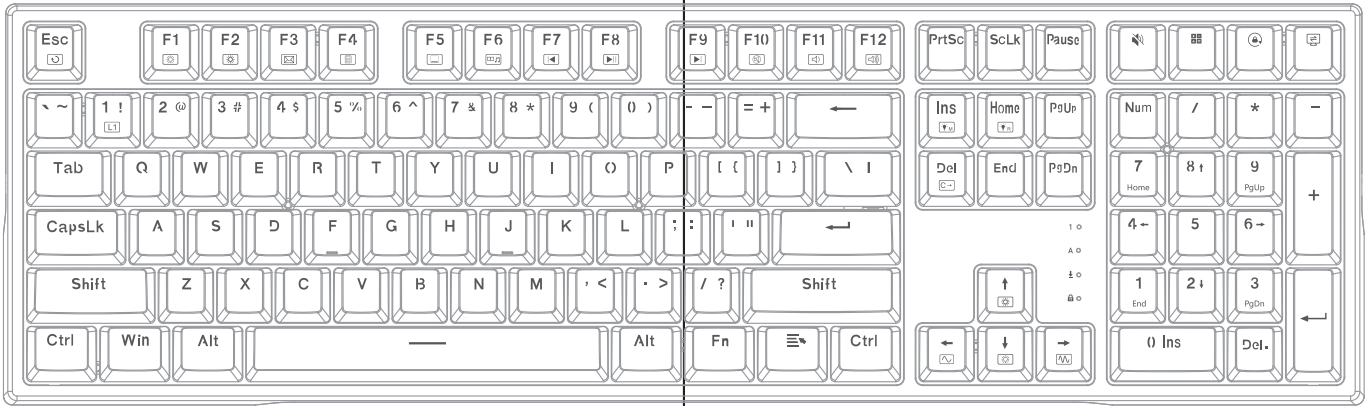


2

3

O.S. Support

Windows XP/ Vista/ Win 7/ Win 8/ Win 10/ Win 11/ Mac O.S.

 How to connect the keyboard with device



Wired Connection

Connect the keyboard to computer with USB cable.

The computer will recognize and configure the keyboard automatically.

Product Features

Backlight

1. The default 16 backlight patterns switch by press [FN] + [Ins] to cycling switch the light patterns. Press [FN] + [Space bar] to turn ON/OFF backlight.
2. Press [FN] + [←/→] to adjust light rotating speed, total 5 levels.
Press [FN] + [↑/↓] to adjust backlight brightness, total 5 levels.
3. Backlight color switching: [FN] + [Del] to cycling switch Red, Green, Blue, Yellow, Pink, Cyan, White, RGB.
4. Preset gaming backlight mode: Press [FN] + [1] to enter preset gaming backlight mode, Keys [Esc] [W] [A] [S] [D] [←] [↑] [↓] [→] will light on by default.
5. Backlight DIY: Press [FN] + [1] to enter preset gaming backlight mode, press [FN] + [Home] to enter DIY mode, 3 LED indicators will flashing till the recording completed,

4

Continuously press the key to select the color you want to set, once key light color setting are completed, press [FN] + [Home] to save.

[WIN] lock

Press [FN] + [WIN] to lock [WIN] key, repeat to unlock.

Commands of key combinations with [FN] key

FN+ F1: Brightness -	FN+ F7: Pre-track
FN+ F2: Brightness +	FN+ F8: Pause/Play
FN+ F3: E-mail	FN+ F9: Next track
FN+ F4: Calculator	FN+ F10: Mute
FN+ F5: My computer	FN+ F11: Volume -
FN+ F6: Media player	FN+ F12: Volume +

Restore factory settings

Press and hold [FN] + [ESC] for 3 seconds.

5

FAQ

1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please unplug the keyboards USB cable from the computer immediately. Wipe off excessliquid and put the keyboard in a dry and ventilated place. Make sure the keyboard is dried naturally before the next use.



6

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help
- This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

7



REDRAGON

WYVERN

REDRAGON WIRED
BACKLIGHTING GAMING KEYBOARD

User manual